
BlitzTrap



BT B PVM ... RM



Basic circuit diagram:

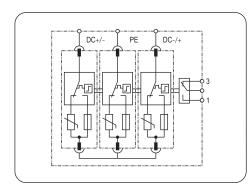

Technical data

Туре		BT B PVM	BT B PVM	BT B PVM	BT B PVM
1 ypc		150 RM	600 RM	1000 RM	1500 RM
ArtNo.		800 555	800 556	800 557	800 558
Max. PV voltage	U _{CPV}	≤ 150V	≤ 600V	≤ 1000V	≤ 1500V
DC voltage (max. continuous voltage)	U _c	75V	300V	500V	750V
Short-circuit current rating (EN 50539-11)	I _{SCPV}	1000A	1000A	1000A	1000A
Lightning impulse current (10/350)	I _{imp}	8.0kA	8.0kA	6.25kA	6.25kA
Nominal discharge current (8/20)	I _n	20kA	20kA	20kA	20kA
Max. discharge current (8/20)	I _{max}	40kA	40kA	40kA	40kA
Voltage protection level for In	Up	≤ 1.0kV	≤ 2.5kV	≤ 4.0kV	≤ 6.0kV
Voltage protection level at 5kA	Up	≤ 0.8kV	≤ 2.0kV	≤ 3.5kV	≤ 5.2kV
Response time	t _A	≤ 25ns			
Operating temperature range	T _u	-40°C+80°C			
Cross-sectionl area		1.5mm² ~ 25mm² solid / 35mm² flexible			
Mounting on		35mm DIN rail			
Enclosure material		Purple (module) & light grey (base) thermoplastic, UL94-V0			
Dimension		3 mods			
Test standards		IEC 61643-11; GB 18802.11; YD/T 1235.1			
Certification		CE(LVD,EMC)			
Type of remote signalling contact		Switching contact			
Switching capacity		AC: 250V/0.5A; DC: 250V/0.1A, 125V/0.2A, 75V/0.5A			
Cross-sectional area for remote signalling contact		Max. 1.5mm² solid / flexible			

Product introduction

1. Summary

BT B PVM ... RM is applied in photovoltaic system. The max. PV voltage up to U_{CPV} =1500V dc, protecting photovoltaic inverter and so on.

Designed according to IEC 61643-11; GB 18802.11; YD/T 1235.1

3. Application

BT B PVM ... RM is applied in PV system power supply system, Prevent surge and direct lightning, protecting photovoltaic inverter equipment.

Installation instruction

This surge protective device is usually installed in distributionbox, protecting PV system devices in photovoltaic generator circuit.

Fuse must be installed at the upstream of the SPD or the lightning arrester to make sure that the protected system has double protection. The value of the fuse used in a SPD system should be conformed to:

- 1. The value of FUSE should not be larger than the max. withstand capacity of the SPD's backup fuse value.
- Under the status of the max, current in the power supply & close loop circuit available current, the fuse should be able to disconnect when overloaded or short-circuited.
- Take 1 & 2 into consideration, the fuse should be as large as possible to allow the maximum surge discharge of SPD.

2. Main character

- · High discharge capacity, quick response, pluggable
- Approved fault-resistant circuit, consist of three varistors and thermal disconnection device
- Double thermal disconnection devices providing more reliable protection
- Window will display red when fault occurs, also provide remote alarm terminal at the same time

4. Application environment


- Temperature: -40°C ~ +80°C
- Relative humidity: ≤ 95% (25°C)

Installation steps

- Check the product for integrity of the package; make sure the product window indicate green.
- 2. Mount the SPD on 35 mm DIN rail.
- Connect conductors, the cross-sectional area of cable must be larger than 6mm². The withstand voltage value of cable is not smaller than AC1060V; ensure wiring reliable.
- 4. If need remote alarm, it should be connected signal lines to remote signal terminal 1 and 2, or 2 and 3 (When normal 1 and 2 open, 2 and 3 close; when fault, the state is reversed).
- After above, switch on the power supply and turn on the circuit breaker, if the SPD appeared green window, indicates the unit is operating normally.

Regularly inspect the operating status, especially after lightning. Once the fuse upstream break, or the SPD's window not indicate green, electrician should check/ replace the SPD.

Installation diagram:

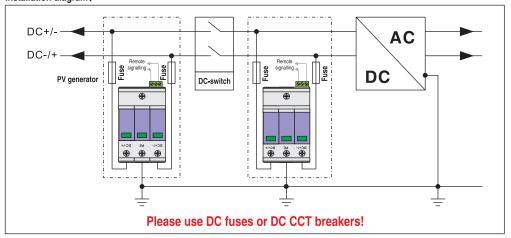

WARNING:

- The device must be installed by electrically skilled person, conforming to national standards and safety regulations.
- 2. It is recommended that installation should be done under power off condition.